

# Walker Tote

## Cutting instructions

Upholstery fabric 14 X 54 inches

or

Cotton fabric 15 X 45 inches

15 X 45 inches fusible fleece

2 - 15 X 45 inches lining fabric

Velcro

Cut four 3 inch pieces (2 sets) of Velcro

## Assembly

### 45 inch fabric cotton fabric


Fuse fleece to main fabric according to manufacturer's directions. With right sides together, sew main fabric and lining fabric with a 1/2 inch seam, leaving an opening for turning. Trim corners and turn. Press. Topstitch 1/4 inch from edge, closing opening with stitching. The Walker Tote will measure 14 X 44 inches. Mark center.

### Upholstery Fabric

Place right side down. Mark center.

### Velcro

On wrong or lining side, sew Velcro 1 1/2 inches from the sides and 5 inches from the center.

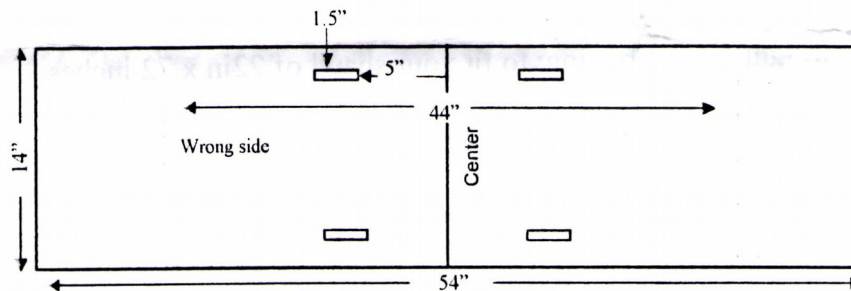

### Pockets

For upholstery fabric, fold on solid lines and bring to broken lines (which are 3 inches from center line) forming pockets. Topstitch fold.

For 45 inch cotton tote, bring topstitched ends to broken lines.

